


RAIN SHOWER HEAD(PLASTIC SHELL)

MODEL 13781

热带雨林系列花洒头

型号 13781

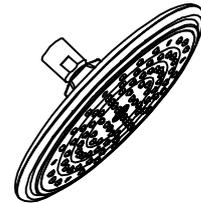


RAIN SHOWER HEAD(METAL SHELL)

MODEL 13881

热带雨林系列花洒头

型号 13881

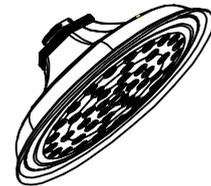


IMMERSION RAINSHOWER HEAD
(PLASTIC SHELL)

MODEL 13782

热带雨林幕洒花洒头

型号 13782

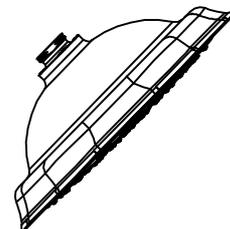

HELPFUL TOOLS
应备工具

ENGLISH

CAUTION: Always turn water OFF before disassembling or removing any faucet. Open faucet handles to relieve water pressure and ensure that complete water shut-off has been accomplished.

中文

注意：在更换或拆卸龙头前，首先一定要关掉水源。然后打开龙头，释放水压，并检查水路，确保其彻底关闭。




SAFETY GLASSES
防护镜



TEFLON TAPE
生胶带



BASIN WRENCH
管钳



PLIERS
钳子



SCREWDRIVER
螺丝刀



FLASHLIGHT
手电筒




ADJUSTABLE WRENCH
扳手



PLUMBER'S PUTTY
密封胶

①

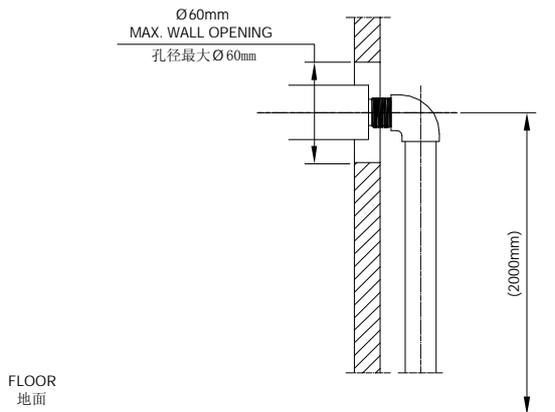

ENGLISH

1. Flush hot and cold water supply lines to remove any debris that has accumulated in the supply lines that could damage the rainshower. Design the supply line according to the diagram above.


NOTE: ensure the supply line is deep-set enough for hang up the shower panel.

中文

安装花洒配件前，要打开冷热供水，排去管内积累的残渣，以免损坏花洒。按照上图尺寸设计供水系统。

注意：确保供水管要足够牢固以支撑花洒。

②

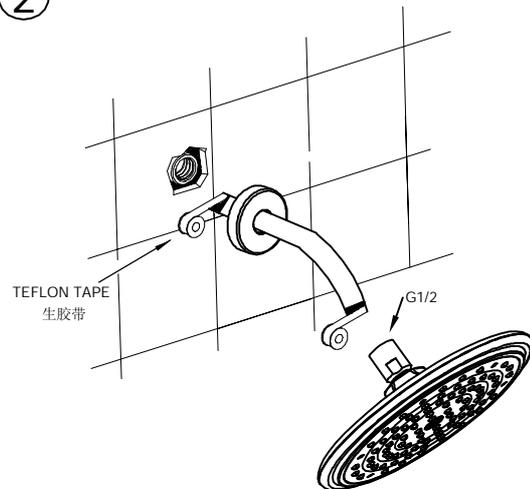

ENGLISH

Apply teflon tape to the both end of shower arm. Thread shower arm into supply pipe, make sure there are enough screw into the elbow in supply pipe, so that the shower arm can strong enough to hang up the shower. Assemble the rain shower, make sure there are no leaks.

中文

将花洒管末端外螺纹缠上生胶带，将花洒管拧紧在供水管上，确保花洒管上的螺纹有足够的长度旋入供水管中以保证花洒管有足够强度挂起花洒，在花洒管的另一头也缠上生胶带，把花洒装上，确保不漏水。